

INSTALLATION INSTRUCTIONS

SOFTWALL PANELS WITH NAILING MARGIN TOP AND BOTTOM

- Strike a line 3" more than the height of the panel (e.g. panel measures 72" the line should be struck at 75"). You can adjust the panel to a lower height if desired, however the bottom edge of the foam should be a maximum of 4" above the floor.

- When mounting panels with nailing margins directly to the wall (concrete block, concrete, wood or drywall), never use less than 2 fasteners on each, top and bottom nailing margins. Factory suggested fasteners are as follows;

- Concrete Block or Concrete - 1 ¼" or 1 ½" concrete screws (flat head) or 1 ¼" or 1 ½" nail pin.
- Wood Wall - #8 x 1 ¼" flat head wood screw or 1 ¼" coarse thread drywall screw.
- Drywall - Nylon Toggle or some other suitable Hallow Wall Anchor.
- Use of construction adhesive is advised for the center of the panel

- Whenever possible begin installing panels in a left to right direction. Begin at the furthest point on the left.

- Hold top edge of panel even with the line that was struck on the wall, plumb panel, and drill hole in top left corner (if going from left to right) set pin or screw top left corner.

- Check plumb again.

- Drill hole in top right corner, (if going from left to right) set pin or screw top right corner.

- Check plumb again.


- Finish top and bottom installation of panel with 2 fasteners on the top and 2 fasteners on the bottom.

-If a panel layout has been provided by the factory, please refer to it; so that the panels are placed in correct location. Panels will be marked on the wood backed side with coordinating symbols to drawing.

For additional installation information contact Greatmats: 877-822-6622

INSTALLATION INSTRUCTIONS
SOFTWALL PANELS WITH NAILING MARGIN TOP AND BOTTOM continued

Page 2
Read details on page 1

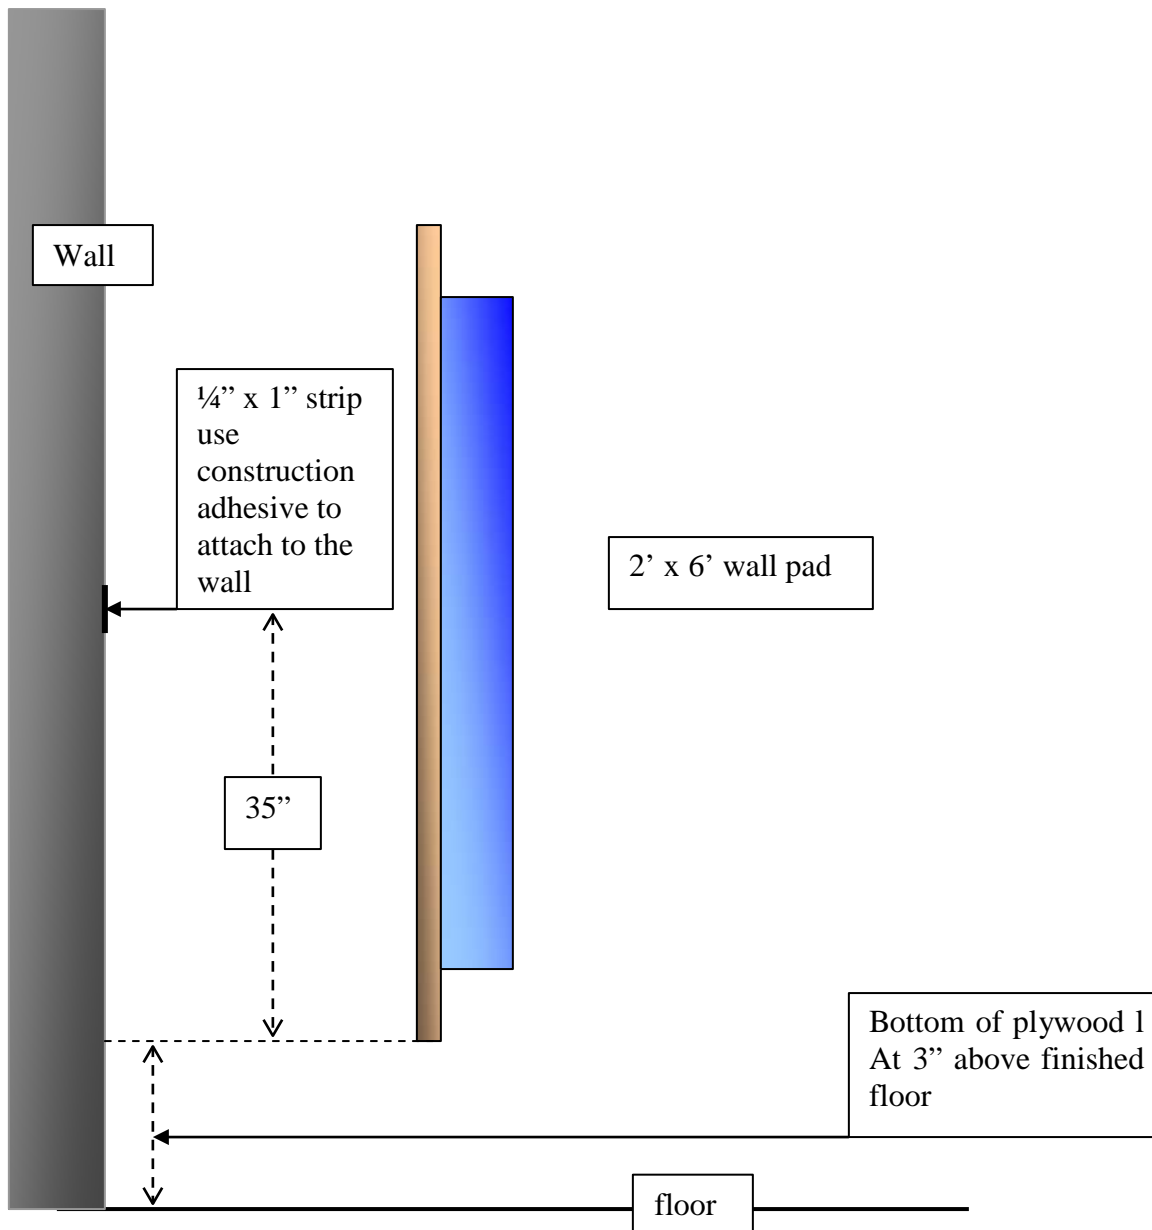

Greatmats.com
117 Industrial Ave
Milltown, WI 54858
Toll free: 877-822-6622
Fax: 715-825-4928
info@greatmats.com